




DOCK BUMPERS

DÉFENSES DE QUAI

DOCK BUMPERS ARE MADE OF A POLYVINYL MATERIAL. THEY MAY TEMPORARILY DISTORT DUE TO THE FOLDING NECESSARY FOR SHIPPING. THEY WILL REGAIN THEIR ORIGINAL SHAPE WITH WARM TEMPERATURE (SUN, WARM WATER...).

INSTALL YOUR BUMPERS WITH STAINLESS STEEL SCREWS (ITEM #1503 "TRUSSHEAD" 1 IN, PACK OF 100). IT WILL PREVENT UNWANTED SPOTS CAUSED BY RUST. SCREW-DOWN EVERY TWELVE INCHES (30 CM) OVER AND UNDERNEATH IT, WITH A 6 IN. GAP (15 CM) (EXCEPT MODEL #10504 WHICH NEED TO BE SCREWED IN THE MIDDLE WITH 3 INCHES WOOD SCREWS AND STAINLESS STEEL WASHERS.)

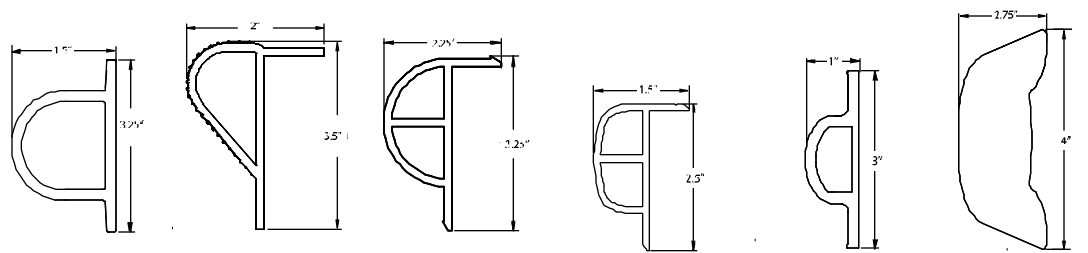

#15000
8'

#15001
8'

#15002
8'

#10502
6'

#10503
25'

#10504
8'

STYROFOAM
STYROMOUSSE



#15004
10"

#15003
10" x 10"

#15015
18"

#15014
18"

#15016
18"

#15005 (cap.)
1 11/16" diam.

VOS DÉFENSES DE QUAI SONT FAITES DE POLYVINYLE. ELLES PEUVENT ÊTRE TEMPORAIREMENT DÉFORMÉES DÛ À L'EMPAQUETAGE NÉCESSAIRE À L'EXPÉDITION. ELLES RETROUVERONT LEUR FORME ORIGINALE AVEC UN PEU DE CHALEUR (SOLEIL, EAU TIÈDE...).

INSTALLEZ VOS DÉFENSES AVEC DES VIS EN ACIER INOXYDABLE (PRODUIT NO. 15031, VIS 1 PO. À TÊTE RONDE "TRUSSHEAD", PAQUET DE 100). VOUS ÉVITEREZ AINSI QUE LA ROUILLE NE CAUSE DES TACHES. VISSEZ TOUT LE LONG DU PARE-CHOC, À TOUS LES DOUZE POUCHES (30 CM) AU-DESSUS ET EN DESSOUS, AVEC UN DÉCALAGE DE 6 PO. (15 CM) (OU, POUR LE MODÈLE NO. 10504, AU CENTRE AVEC DES VIS À BOIS DE 3 POUCHES ET DES RONDELLES EN ACIER INOXYDABLE).