



## ASSEMBLY INSTRUCTIONS for ALUMINUM LADDERS:

#15012

#15013

#15094

**# 1** Install steps with #8 x 2" square head screws  
(See WARNING below)

**# 2** Install "J" hooks with #10 x 1 ½" bolts & nuts

**# 3** Place ladder on dock and screw in footman loop with #8 x 2 ½" brown screws.

It is highly recommended to add one or two 1 ½" thick piece of wood under the decking to assure a strong hold of the 2 ½" screws. If you cannot access the underneath of the dock, try gently retrieving decking planks to insert the strengthener(s).

**# 4** Install plastic caps if they are not inserted in the straights yet.

### INCLUDED HARDWARE

2x "J" Hooks

2x Footman Loops x2

4x #10 x 1 ½" Stainless Steel Bolts & Nuts

4x #8 x 2 ½" Brown Screws


4x Plastic Caps

#8 x 2" Robertson #2 Stainless Steel Screws:


**12x** for **3** steps ←

**16x** for **4** steps ←

**20x** for **5** steps ←

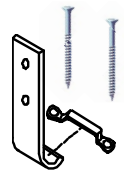

**#3**

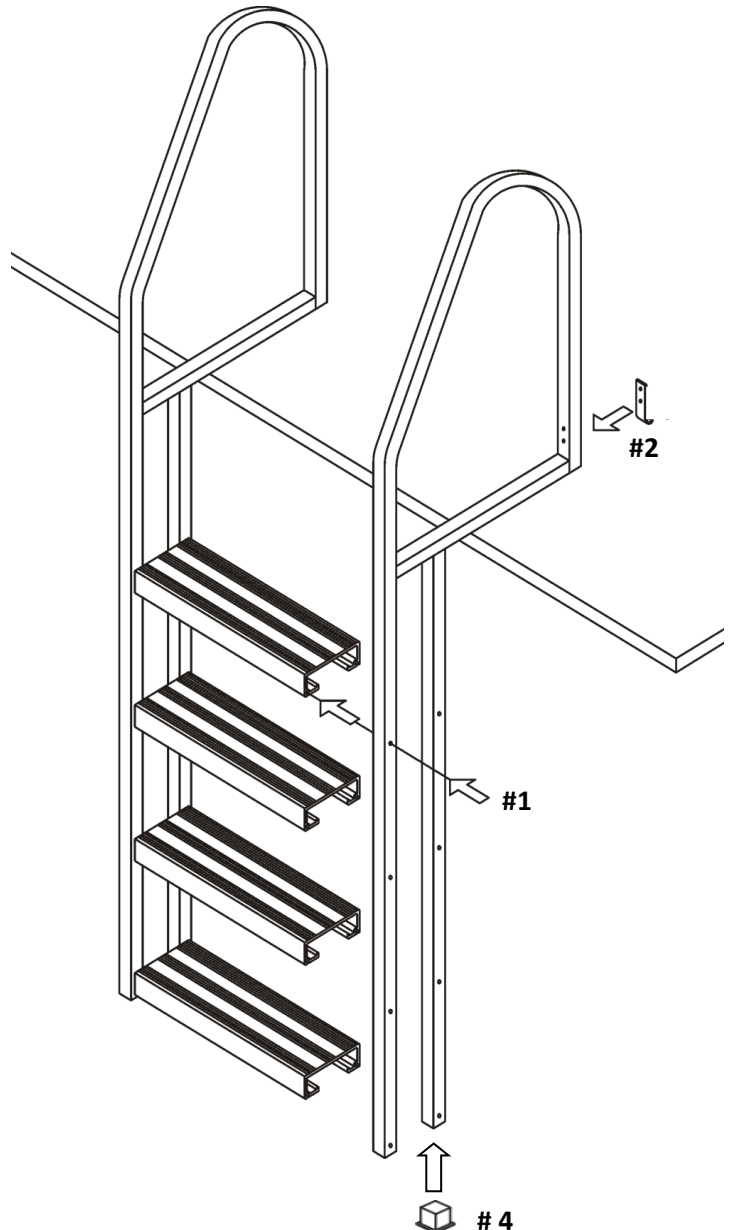

Should you encounter any problems with this product, do not return it to the store. Please contact Multinautic's Customer Service at 1-800-585-1237, toll-free

### **WARNING !**

When installing the steps, you should start by the one at the top of the ladder.

If the alignment is not perfect, **GENTLY** align the hole with the screw and tight **lightly**.

You have to install all the steps prior finishing tightening.

**"DO NOT OVERTIGHT"**